



International Ten Rater Class Sail Measurement Procedure

A suggested method

What is this document for? - 1

- The measurement of a boat, or its equipment, to establish that it complies with the relevant class rules is a process much like any scientific experiment. In a scientific experiment the physical measurements are taken with suitable equipment by the experimenter. Best practice demands that the measurements are **valid**, **reliable** and **credible**.
- For the measurement of a boat, or its equipment, the **validity** of the measurements is determined by the class rules and is, therefore, not determined by the official measurer. However, the **reliability** and **credibility** are entirely under his control and both are of interest to everyone involved – owner, sailor, official measurer, certification authority and fellow competitors.
- Without good **reliability** and **credibility** in the measurement process one of the basic principles of the sport, that competitors are governed by a body of rules that they are expected to follow, breaks down. See RRS ‘Basic Principles’.
- It should be self evident that it is important to establish what represents good design for the measurement equipment and good practice for its use. This document seeks to identify one example of good design of measurement equipment and the good practice of its use.

What is this document for? - 2

- The Royal Yachting Association, the World Sailing Member National Authority for Great Britain, maintains the 'RYA Racing Charter' which is included in its copies of the RRS.
- One of the objectives of the RYA Racing Charter is:

'To provide the framework for everyone to enjoy the sport of sailboat racing in whatever capacity and to whatever level the individual desires.'

It goes on to state Principles and Practices that support the objectives. One is:

'Officials... agree to provide the fairest racing possible.'

- Official Measurers play an essential and important role in helping to maintain the framework that supports sailing and, unless they carry out their tasks diligently, the fairest racing will not be possible.
- The Certification Authority should support its Official Measurers by assisting them to carry out their role effectively. Training in the process of equipment measurement is an essential part of this support.
- This document is provided by IRSA to aid that support.

References - 1

The following documents are referred to in the slides

- IRSA International Ten Rater Class rules 2018 - [link](#)
- ERS – Equipment Rules of Sailing 2017-2020 - [link](#)



References - 2

The following documents will give valuable additional insight into the measurement process for the Ten Rater Class as well as for any other class.

- International Measurers Manual – published by World Sailing - [link](#)
- Guidance for Equipment Inspection (event measurement) – published by IRSA - [link](#)



Contents

- Preparation
- Equipment
- Setting up
- Mast spar measurement – constant & evenly tapered profiles
- Mast spar measurement - other profiles
- Spar used to extend the tack and/or clew of sail measurement
- Sail area measurement
- Data entry
- Round measurements correctly
- Comparing dimensions with limits
- Certification of the largest sails
- Certification of smaller sails
- Sail maker guidance

Preparation

The process of measuring the rig and sails of a Ten Rater can be carried out easily by one person.


Whilst not essential at this stage, it is useful to have a full set of certification control forms printed off and set of Ten Rater Class rules.

Open a certificate spreadsheet on the computer and delete all existing data. Print this blank copy to record the measurements taken.

- Set of Ten Rater Class Rules



INTERNATIONAL
Ten Rater
CLASS RULES

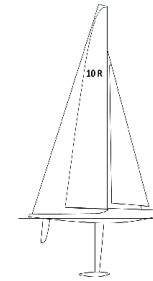

Ten Rater rule is a direct descendant of the Length and Sail Area rule of 1887. It has been used for models since the 1950s.

- Set of Ten Rater Certificate & Certification Control Forms (electronic and hard copy for recording convenience) [boat data input sheet shown here]

The screenshot shows a digital form titled "TEN RATER CERTIFICATE & CERTIFICATION CONTROL FORM". It includes fields for "Boat Name", "Owner", "Designer", "Builder", "Date of Construction", and "Date of Measurement". There are also sections for "Declaration by the Measurer" and "Declaration by the Owner". The form is designed to be filled out with boat data and measurement results.

Equipment - 1

This list should not be regarded as everything that is essential for a measuring session, nor should it be viewed as a list of the absolute minimum requirements.

- Flat surface 2500 mm x 650 mm
- Sail/spar measurement grid
- Caliper (Vernier), tape measure and straight edge rule (600 & 300 mm).
- Adhesive tapes for holding sail measurement grid to flat surface
- Pens and pencils for recording data
- Waterproof pen for certifying sails

Equipment - 2


Sail/spar measurement grid

Use thick Mylar film 2450 mm x 600 mm to make the grid.

Place a vertical line 50 mm from the right hand edge.

Add grid lines at 200 mm spacing perpendicular to the first line, numbered 0 to 11.


Add vertical lines at 50 mm spacing below the lowest grid line and perpendicular to that grid line, numbered 0 to 11.

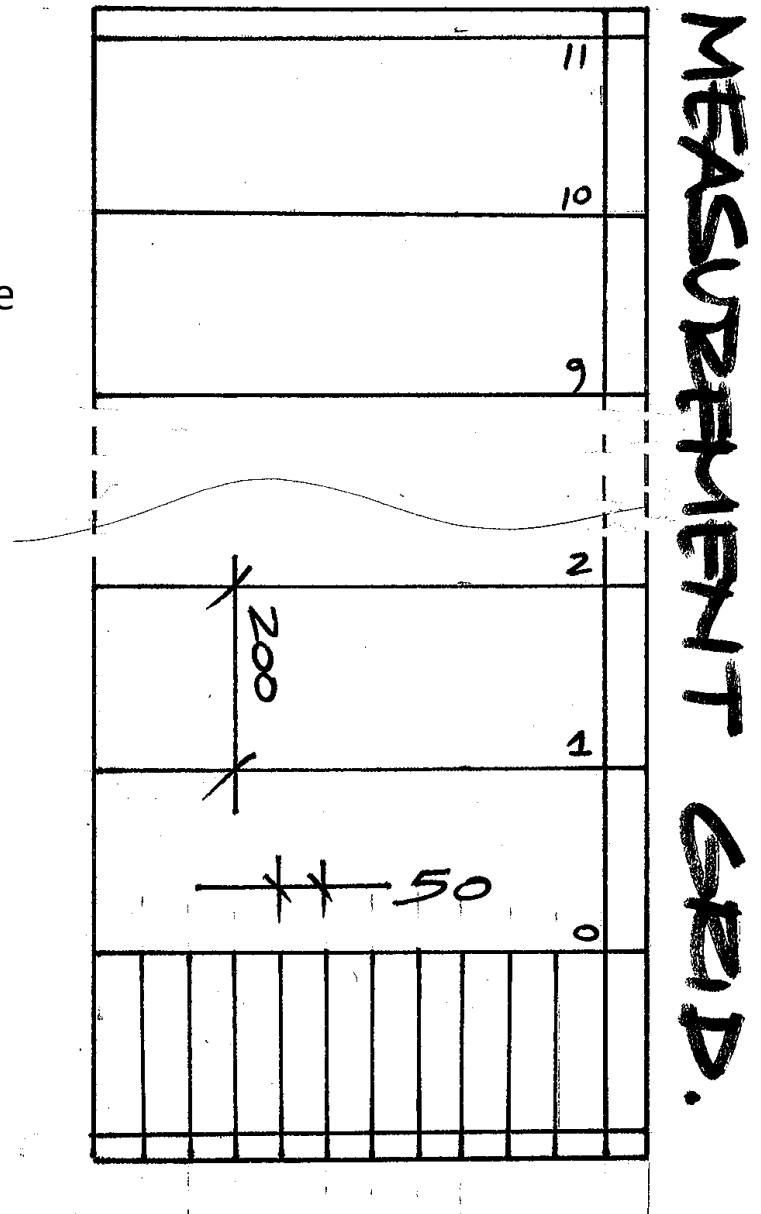

Setting Up

Prepare grid

Tape the sail/spar measurement grid to the flat surface using tabs of tape at the four corners.

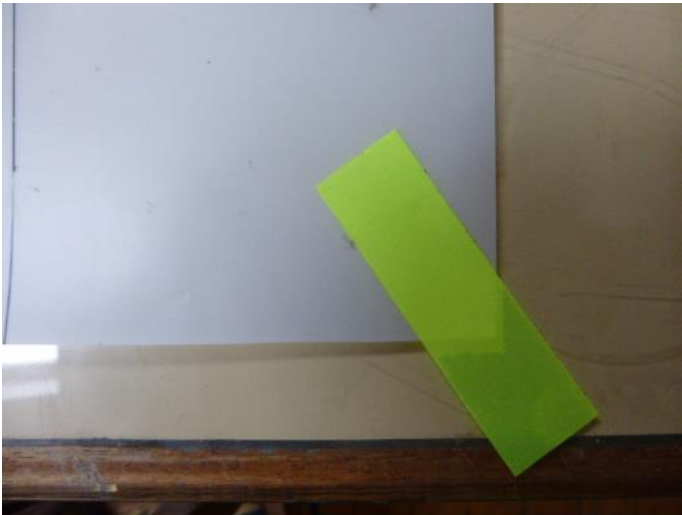

Mast spar measurement – constant & evenly tapered profiles

Many **mast spar** are of constant cross section or are evenly tapered along their length.

In these cases the area of the spar, A_m , is calculated as:


$$A_m = h \times (m_o + m_n) / 2$$

where:

h is the length of the spar above deck,

m_o is the **fore-and-aft mast spar cross section** or **vertical boom spar cross section** at one end,

m_n is the **fore-and-aft mast spar cross section** or **vertical boom spar cross section** at the other end.

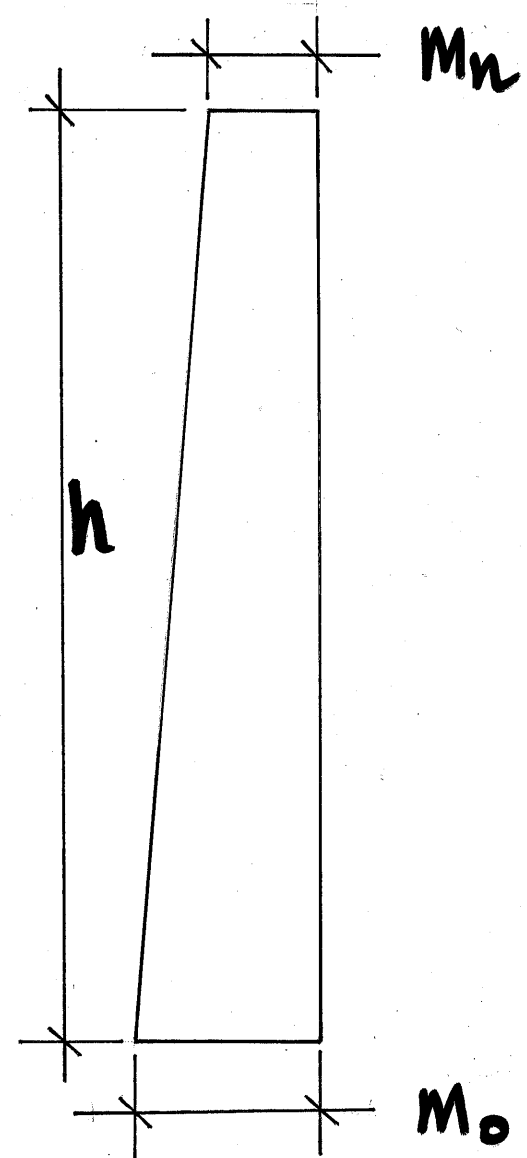


Mast spar measurement - other profiles – 1

Many **mast spar** have an irregular taper. They are measured on the sail/spar measurement grid.

Mast spar shall be placed over the sail/spar measurement grid perpendicular to the grid lines and with a grid line at deck level.

See Figure L.1.1 and L.1.2 of the class rules.

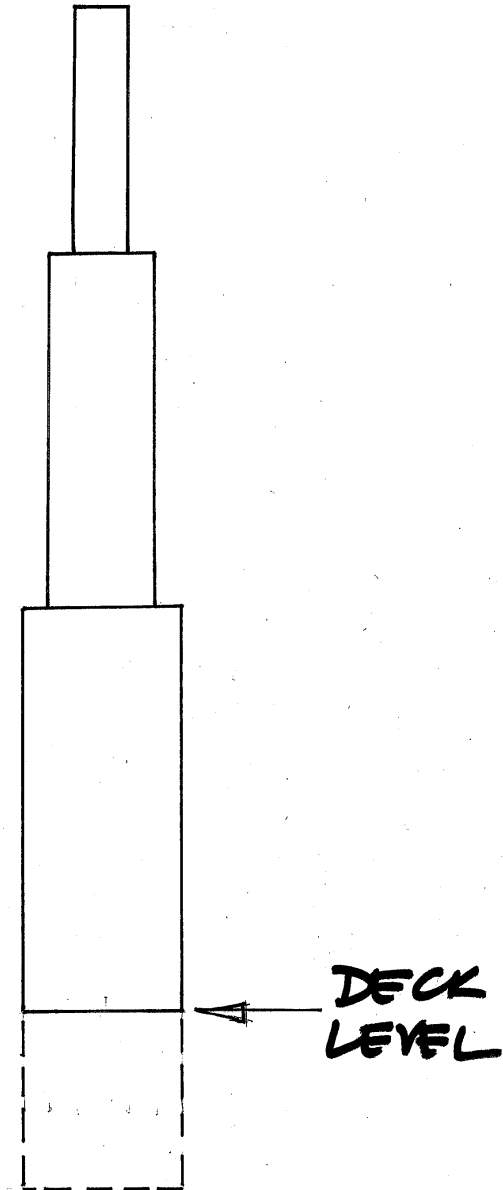

Mast spar measurement - other profiles - 2

Mast spar shall be placed over the measurement grid perpendicular to the grid lines and with a grid line at deck level.

See Figure L.1.1 and L.1.2 of the class rules.

In this example there is a fitting (the grey tube) on the **mast spar** at deck level.



Mast spar measurement - 3

Mast spars shall be placed over the measurement grid perpendicular to the grid lines and with a grid line at deck level.

See Figure L.1.1 and L.1.2 of the class rules.


The leading edge of this **mast spar** is on the vertical line.



Mast spar measurement - 4

The fore-and-aft **mast spar cross sections**, m_0 to m_n , shall be measured at and along all the grid lines that the spar cuts.

In the example on the right a fitting occurs at the grid line – the measurement required is of the spar cross section (the main structural part of the **mast**) so ignore the fitting when taking the measurement.

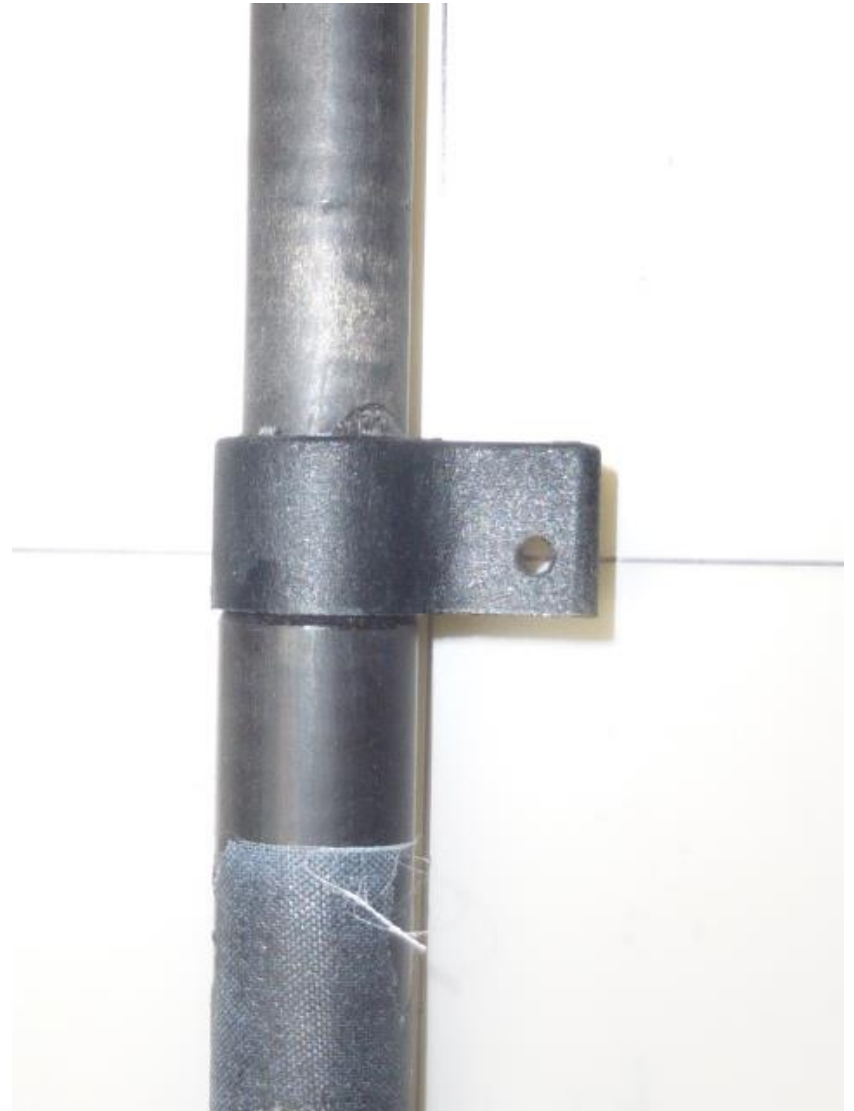

Mast spar measurement - 5

The area of spar above the uppermost gridline cutting the spar, A_t , is calculated as:

$$A_t = 0.7 \times m_n \times E$$

where E is the height of the spar above the uppermost grid line and m_n is the uppermost width.

Ignore any fitting that is not faired into the **mast spar**. E in this example is 130 mm.



Mast spar measurement - 6

Fittings not faired into a spar and no bigger than is reasonably required for their purpose **shall not be considered to be part of the spar.**

Fittings faired into a spar and/or bigger than reasonably required for their purpose **shall be considered to be part of the spar.**

If the backstay crane had been faired into the spar, or was bigger than necessary, it would be included in the E measurement.



Measurement of spars used to extend the **tack** and/or **clew** of **sail**

One spar with a maximum spar **cross section** not exceeding 22 mm may be used to extend the **tack** and/or **clew** of each **sail** without being included in the **certified rig** area. – see next page


Most rigs have only two spars of less than 22 mm cross section used to extend the **tack** and/or **clew** of each sail. In this case there will be no need to measure any such spars.

In the case of “classic swing rig”, area of the spar cantilevered from the **mast** to which the spar used to extend the **tack** and **clew** of the **headsail** is attached shall be included in the **certified rig** area.


Any **spar** that shall be included in the **certified rig** area according to the class rule J.1 shall be measured as for **mast spars**.

Maximum spar cross section measurement

Check whether or not the spar used to extend the **tack** and/or **clew** of each **sail** needs to be included in the **certified rig** area - it is to be done in accordance with class rule J.1(a) as shown here:

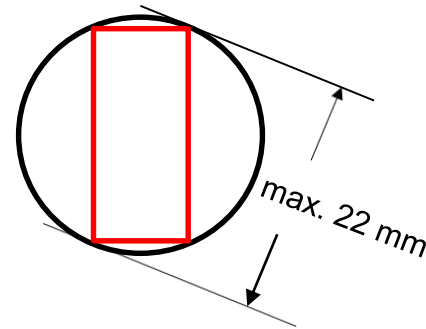

If the area is to be included in the **certified rig** area then measure the **vertical boom spar cross section** mentioned in Class Rules J.3, J.4 and Figure L.1 - to be taken as shown here:

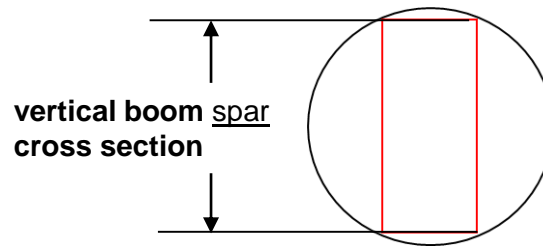

Sail area measurement – 1

Some general points in the Class Rules that vary the approach required by the Equipment Rules of Sailing:



- Battens need not be removed from sails
- Sails can be left on the spars – but it will be easier if they are removed
- Stays inside luff tabling that are less than 2 mm in diameter need not be removed
- Tell tales overlapping sail edges shall be ignored.

Sail area measurement - 2

Some general points in the Class Rules that vary the approach required by the Equipment Rules of Sailing:

Parts of a headboard that are less than 2 mm in diameter and not covered by sail material shall not be taken as parts of the **sail**.

Where a **sail** has a luff rope the cross widths shall be taken to aft edge of the **spar**.

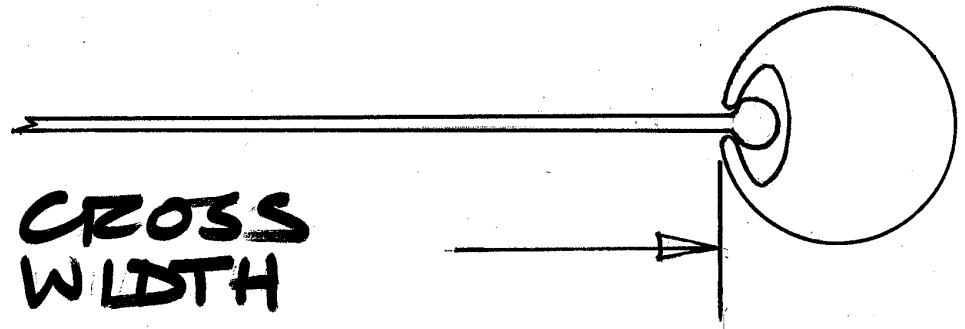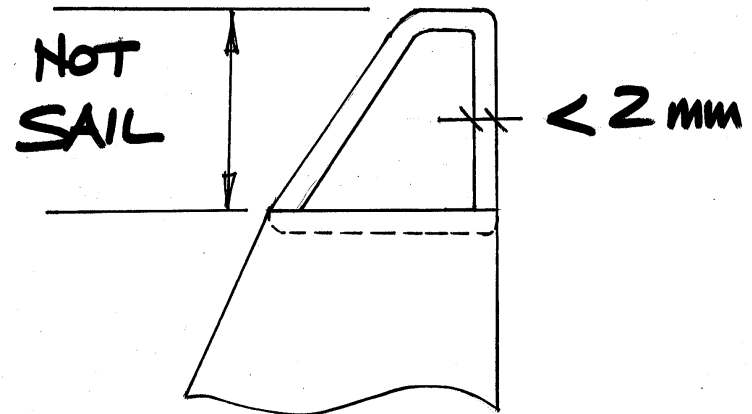


Sail area measurement - 3

Discontinuous attachments on the **luff** shall be disregarded for the purpose of measurement provided that their total length, measured along the **luff**, does not exceed 10% of the **luff** length and that the longest attachment is no more than twice the shortest.

CROSS WIDTHS
TAKEN TO HERE IF
ATTACHMENTS
 $< 10\%$ LUFF
LENGTH

CROSS WIDTHS
TAKEN TO HERE IF
 $> 10\%$ LUFF
LENGTH

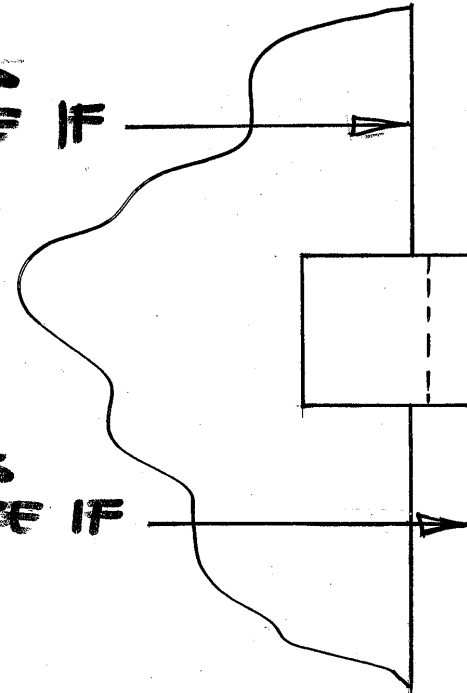



Sail area measurement - 4

The **sail** shall be placed over the measurement grid with the **clew point** on the datum grid line (below left) and with the **head point** (right) and **tack point** (below right) on a line perpendicular to the grid lines. See Figure L.2.1.



Sail area measurement - 5

The upper limit of area A1 shall be marked at the **luff** and **leech** where they pass over the grid line. See Figure L.2.3. The illustration to the right shows the sail correctly positioned on the grid. The illustration below shows the sail (moved) after marking.

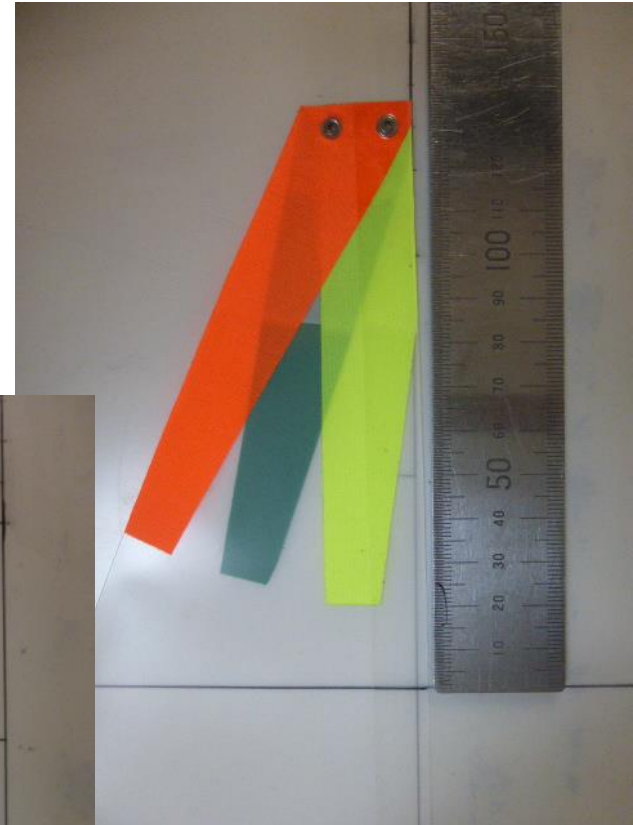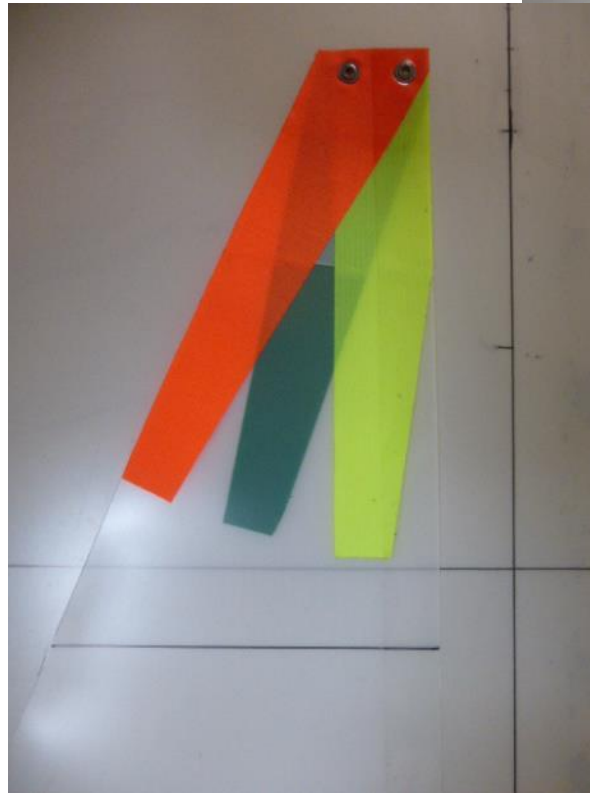

Sail area measurement - 6




Cross widths, c_0 to c_n , shall be measured from the **leech** to the **luff** at and along all the horizontal grid lines which the **sail** cuts. See Figure L.2.4



The cross width is 408 mm.

Sail area measurement - 7

Heights, h_0 to h_n , shall be measured from the datum grid line to the **foot** at and along all the vertical grid lines which the **sail** cuts. See Figure L.2.4.

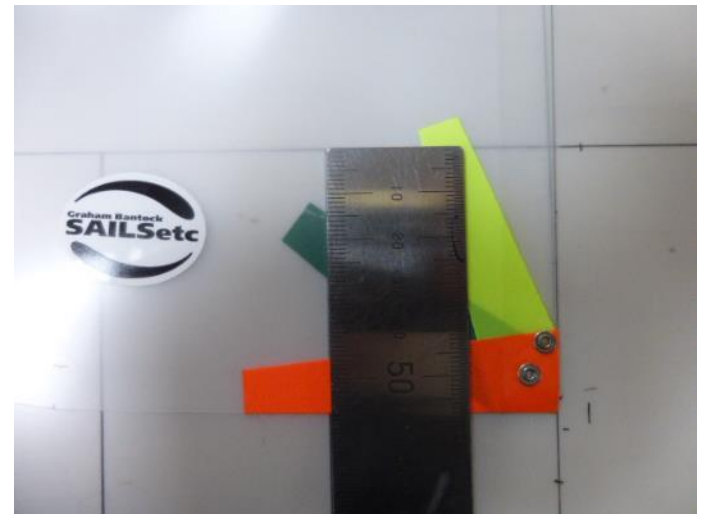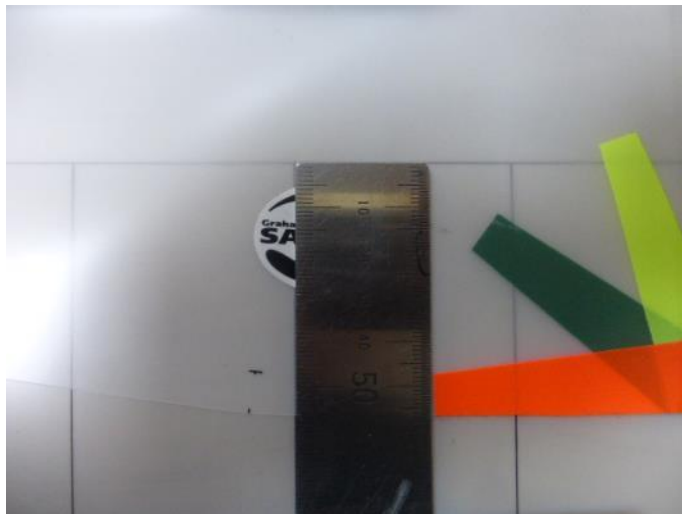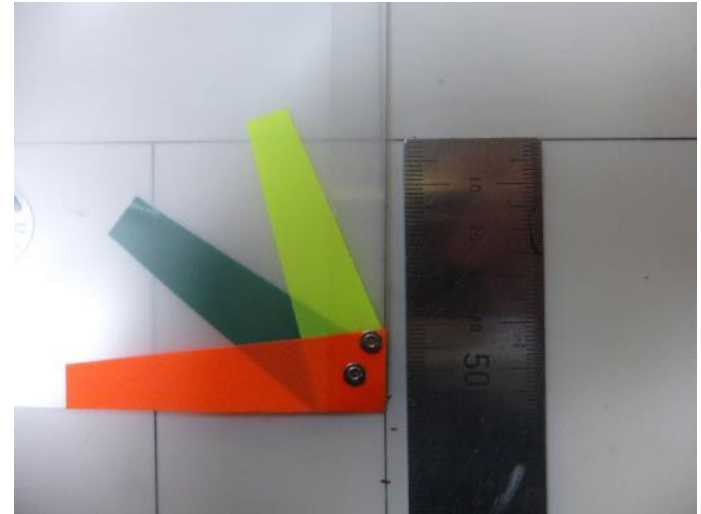


IRSA - WORLD RADIO SAILING																																																																											
IRSA 10 RATER CLASS SAIL CERTIFICATION CONTROL FORM																																																																											
89 official validity check																																																																											
Sail 1		Hull registration number					2345																																																																				
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>E</td><td style="background-color: #007bff; color: white;">50</td></tr> <tr><td>c_n</td><td style="background-color: #007bff; color: white;">55</td></tr> <tr><td>c₁₀</td><td style="background-color: #007bff; color: white;"></td></tr> <tr><td>c₉</td><td style="background-color: #007bff; color: white;">118</td></tr> <tr><td>c₈</td><td style="background-color: #007bff; color: white;">167</td></tr> <tr><td>c₇</td><td style="background-color: #007bff; color: white;">212</td></tr> <tr><td>c₆</td><td style="background-color: #007bff; color: white;">265</td></tr> <tr><td>c₅</td><td style="background-color: #007bff; color: white;">295</td></tr> <tr><td>c₄</td><td style="background-color: #007bff; color: white;">329</td></tr> <tr><td>c₃</td><td style="background-color: #007bff; color: white;">361</td></tr> <tr><td>c₂</td><td style="background-color: #007bff; color: white;">392</td></tr> <tr><td>c₁</td><td style="background-color: #007bff; color: white;">316</td></tr> <tr><td>SUM1</td><td style="background-color: #007bff; color: white;">2455</td></tr> <tr><td>h₁₀</td><td style="background-color: #007bff; color: white;"></td></tr> <tr><td>h₉</td><td style="background-color: #007bff; color: white;"></td></tr> <tr><td>h₈</td><td style="background-color: #007bff; color: white;"></td></tr> <tr><td>h₇</td><td style="background-color: #007bff; color: white;">19</td></tr> <tr><td>h₆</td><td style="background-color: #007bff; color: white;">27</td></tr> <tr><td>h₅</td><td style="background-color: #007bff; color: white;">34</td></tr> <tr><td>h₄</td><td style="background-color: #007bff; color: white;">40</td></tr> <tr><td>h₃</td><td style="background-color: #007bff; color: white;">45</td></tr> <tr><td>h₂</td><td style="background-color: #007bff; color: white;">45</td></tr> <tr><td>h₁</td><td style="background-color: #007bff; color: white;">35</td></tr> <tr><td>SUM2</td><td style="background-color: #007bff; color: white;">245</td></tr> <tr><td>h₀</td><td style="background-color: #007bff; color: white;">12</td></tr> </table>		E	50	c _n	55	c ₁₀		c ₉	118	c ₈	167	c ₇	212	c ₆	265	c ₅	295	c ₄	329	c ₃	361	c ₂	392	c ₁	316	SUM1	2455	h ₁₀		h ₉		h ₈		h ₇	19	h ₆	27	h ₅	34	h ₄	40	h ₃	45	h ₂	45	h ₁	35	SUM2	245	h ₀	12						<p style="background-color: #007bff; color: white; padding: 2px;">Guide measurements for sail makers and Equipment Inspectors :</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Luff length</td><td style="text-align: right;">2062</td></tr> <tr><td>Leech length</td><td style="text-align: right;">2096</td></tr> <tr><td>Luff perpendicular</td><td style="text-align: right;">435</td></tr> <tr><td>Foot</td><td style="text-align: right;">435</td></tr> </table> <p>NB : These dimensions are approximate and for guidance only</p> <p>To maximise sail area Either</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Delta Sail 1 LP</td><td style="text-align: right;">18</td></tr> <tr><td>Equivalent to Sail 1 LP</td><td style="text-align: right;">453</td></tr> </table> <p>Or</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Delta Sail 2 LP</td><td style="text-align: right;">24</td></tr> <tr><td>Equivalent to Sail 2 LP</td><td style="text-align: right;">428</td></tr> </table>			Luff length	2062	Leech length	2096	Luff perpendicular	435	Foot	435	Delta Sail 1 LP	18	Equivalent to Sail 1 LP	453	Delta Sail 2 LP	24	Equivalent to Sail 2 LP	428
E	50																																																																										
c _n	55																																																																										
c ₁₀																																																																											
c ₉	118																																																																										
c ₈	167																																																																										
c ₇	212																																																																										
c ₆	265																																																																										
c ₅	295																																																																										
c ₄	329																																																																										
c ₃	361																																																																										
c ₂	392																																																																										
c ₁	316																																																																										
SUM1	2455																																																																										
h ₁₀																																																																											
h ₉																																																																											
h ₈																																																																											
h ₇	19																																																																										
h ₆	27																																																																										
h ₅	34																																																																										
h ₄	40																																																																										
h ₃	45																																																																										
h ₂	45																																																																										
h ₁	35																																																																										
SUM2	245																																																																										
h ₀	12																																																																										
Luff length	2062																																																																										
Leech length	2096																																																																										
Luff perpendicular	435																																																																										
Foot	435																																																																										
Delta Sail 1 LP	18																																																																										
Equivalent to Sail 1 LP	453																																																																										
Delta Sail 2 LP	24																																																																										
Equivalent to Sail 2 LP	428																																																																										
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>C₀ + C_n</td><td style="background-color: #007bff; color: white;">490</td></tr> <tr><td>SUM1</td><td style="background-color: #007bff; color: white;">2455</td></tr> </table>		C ₀ + C _n	490	SUM1	2455	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%;">A1 :</td> <td style="width: 15%;">$C_0 + C_n$</td> <td style="width: 10%; background-color: #007bff; color: white;">490</td> <td style="width: 10%; text-align: center;">x</td> <td style="width: 10%; text-align: center;">100</td> <td style="width: 10%; text-align: center;">→</td> <td style="width: 10%; text-align: center;">49000</td> <td style="width: 10%; text-align: center;">+</td> <td style="width: 10%; text-align: center;">491000</td> <td style="width: 10%; text-align: center;">→</td> <td style="width: 10%; text-align: center;">A1</td> <td style="width: 10%; text-align: right;">540000</td> </tr> <tr> <td>A2 :</td> <td>$0,5 \times E (c_n \times (2 + E / 200) - E \times c_{n-1} / 200)$</td> <td></td> <td>x</td> <td>200</td> <td>→</td> <td></td> <td></td> <td></td> <td>→</td> <td>A2</td> <td style="text-align: right;">2356</td> </tr> <tr> <td>A3 :</td> <td>$h_0 + h_n$</td> <td style="background-color: #007bff; color: white;">21</td> <td>x</td> <td>25</td> <td>→</td> <td style="text-align: center;">525</td> <td>+</td> <td style="text-align: center;">12250</td> <td>→</td> <td>A3</td> <td style="text-align: right;">12775</td> </tr> <tr> <td></td> <td>SUM2</td> <td style="background-color: #007bff; color: white;">245</td> <td>x</td> <td>50</td> <td>→</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </table>								A1 :	$C_0 + C_n$	490	x	100	→	49000	+	491000	→	A1	540000	A2 :	$0,5 \times E (c_n \times (2 + E / 200) - E \times c_{n-1} / 200)$		x	200	→				→	A2	2356	A3 :	$h_0 + h_n$	21	x	25	→	525	+	12250	→	A3	12775		SUM2	245	x	50	→																				
C ₀ + C _n	490																																																																										
SUM1	2455																																																																										
A1 :	$C_0 + C_n$	490	x	100	→	49000	+	491000	→	A1	540000																																																																
A2 :	$0,5 \times E (c_n \times (2 + E / 200) - E \times c_{n-1} / 200)$		x	200	→				→	A2	2356																																																																
A3 :	$h_0 + h_n$	21	x	25	→	525	+	12250	→	A3	12775																																																																
	SUM2	245	x	50	→																																																																						
<table border="1" style="float: right; width: 150px;"> <tr> <td style="width: 60%;">S (sail1)</td> <td style="text-align: right;">555131</td> </tr> </table>												S (sail1)	555131																																																														
S (sail1)	555131																																																																										
DECLARATION BY THE MEASURER I confirm that I have taken the measurements on this form, that they are correct and that to the best of my knowledge, the sail complies with the class rules in force at present, except as I have stated below. <div style="border: 1px solid black; height: 40px; margin-top: 10px;"></div>																																																																											
<div style="font-size: small;">The measurer may report anything here.</div> <table style="width: 100%;"> <tr> <td style="width: 60%;">Name of Official Measurer</td> <td style="width: 40%;">Stamp (Certification Authority)</td> </tr> <tr> <td>(BLOCK CAPITALS)</td> <td></td> </tr> <tr> <td>Signature</td> <td>Date</td> </tr> <tr> <td>Effective: 1st April 2018</td> <td>V 18-2</td> </tr> </table>												Name of Official Measurer	Stamp (Certification Authority)	(BLOCK CAPITALS)		Signature	Date	Effective: 1st April 2018	V 18-2																																																								
Name of Official Measurer	Stamp (Certification Authority)																																																																										
(BLOCK CAPITALS)																																																																											
Signature	Date																																																																										
Effective: 1st April 2018	V 18-2																																																																										
IRSA Ten Rater Class Sail 1 CCF - Certificate page 2 - not valid without pages 1, 3 and 4. © 2018, IRSA																																																																											

- The uppermost cross width is always entered into the box marked c_n
- The aftermost height is always entered into the box marked h_n
- Whole number values only – no decimal places.

Data entry - 2

To the right hand side of the data entry area and below it are graphs that show the sail profile.

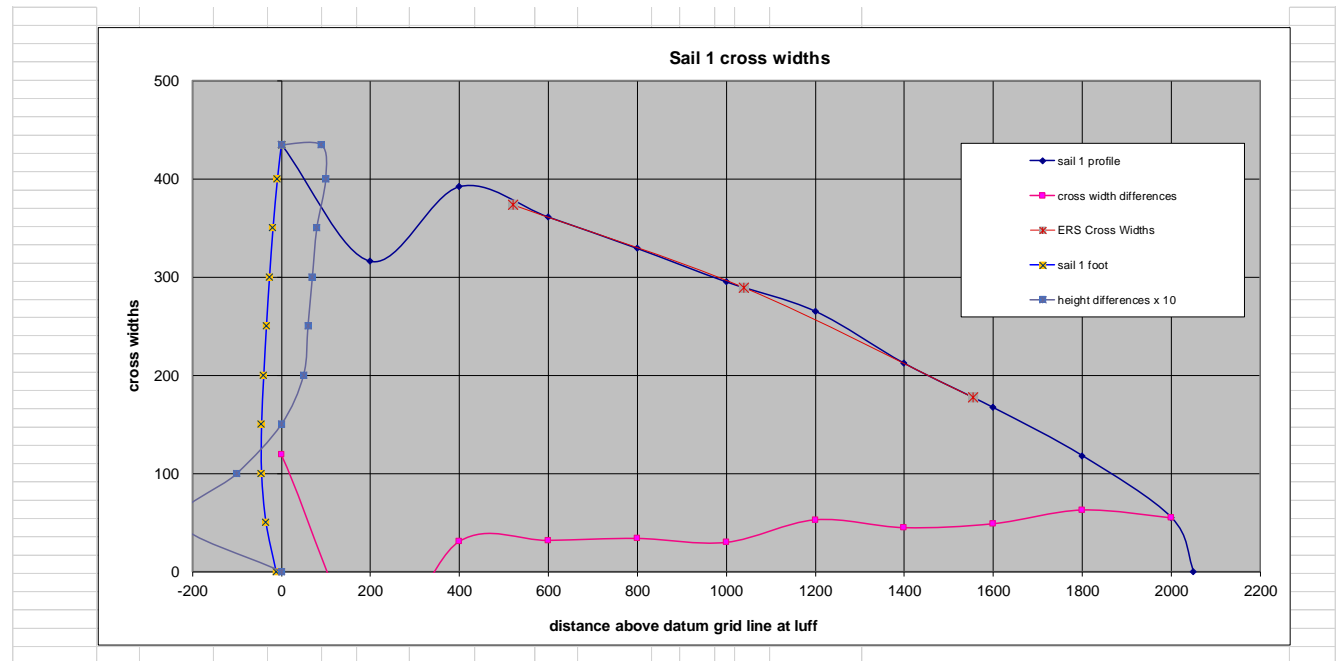

- The leech profile is shown by dark blue diamonds and a dark blue line.
- The foot profile is shown by red crosses on yellow squares and a bright blue line.
- The pink squares and a pink line show the changes in cross widths.
- The pinks squares on a blue line shown the changes in foot heights.

Two errors in the data entry for the cross widths are obvious from the leech profile line. The cross width at 200 mm (C1) is probably 100 mm too small. The cross width at 1200 mm (C6) is probably 10 mm too large.

Large irregularities appear at those places in the 'change in cross width' line.

Data entry - 3

To the right hand side of the data entry area are tables in yellow that check for hollows in the sail leech and foot profiles.

Because the data entry for C1 was 100 mm too small the word 'check' appears against C1.

Because the data entry for C6 is 10 mm too great it appears there are hollows each side of C6 i.e. the word 'check' appears at C5 and C7.


The word 'check' also appears for h2 and h3 for the foot profile. A visual check of the graph shows this may not be the case.

Check the sails to establish the correct dimensions and for any hollows where indicated.

	Hollows check :		
	Measurer - Please check for hollows where noted		
C11	0	0	
C10	55	55	ok
C9	118	111	ok
C8	167	165	ok
C7	212	216	check
C6	265	254	ok
C5	295	297	check
C4	329	328	ok
C3	361	361	ok
C2	392	339	ok
C1	316	414	check
C0	435	158	ok
hn	9		
h10	0	28.5	
h9	0	40	
h8	0	42.5	
h7	19	39.5	
h6	27	33.5	
h5	34	26.5	
h4	40	18	
h3	45	9.5	check
h2	45	4.5	check
h1	35	0	
h0	12		

Data entry - 4

Checking the sail reveals 316 was entered instead of 416 at C1 and 265 was entered instead of 256 at C6. When these corrections are made the sail profile appears shown here.

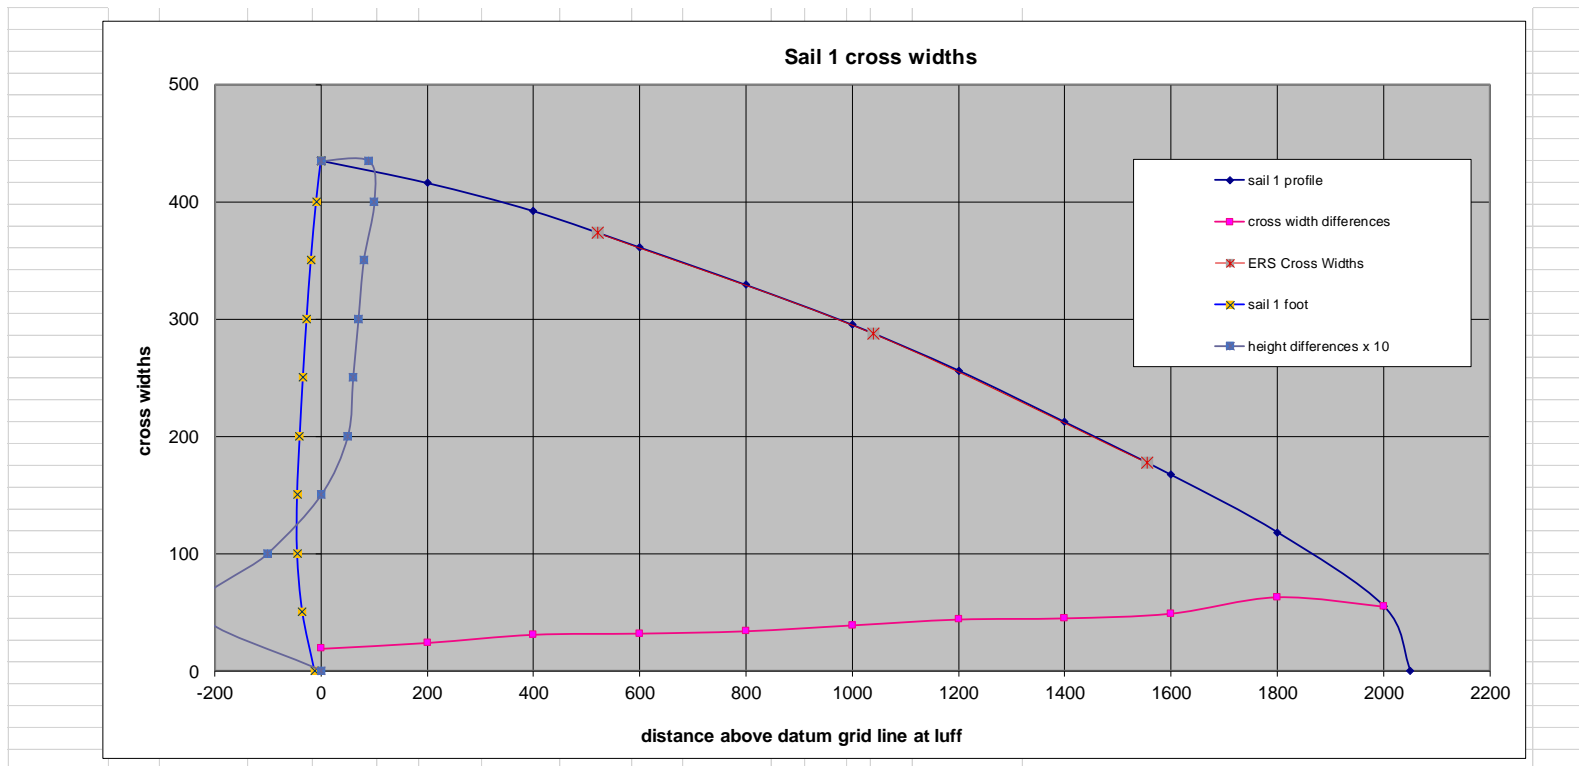

The 'change in cross widths' and 'change of foot heights' lines are now smooth.

Note that there are three data points (orange/red on a red line) that show the estimated ERS quarter, half and three-quarter cross widths for the sail. Not used for measurement but used for the sail maker guidance page.

Data entry - 5


Mast spars that are of constant diameter, or have an even taper, are measured by measuring the width at the **heel point** (m0) and the **top point** (mn) and the distance between those (h).

See the Spar2 area to the right hand side of the spar – page 4 sheet.

In the example here this calculation is used to find the area of a **boom spar** that is part of a swing rig that uses three **boom spars** in total. It is 440 mm long and 12 mm deep.

Masts that have an irregular profile are measured in the same way that sails are measured.

This includes any spar that is made with a step 'taper' using tubes of different diameters. This mast is made of 16, 14 and 12 mm tubes.

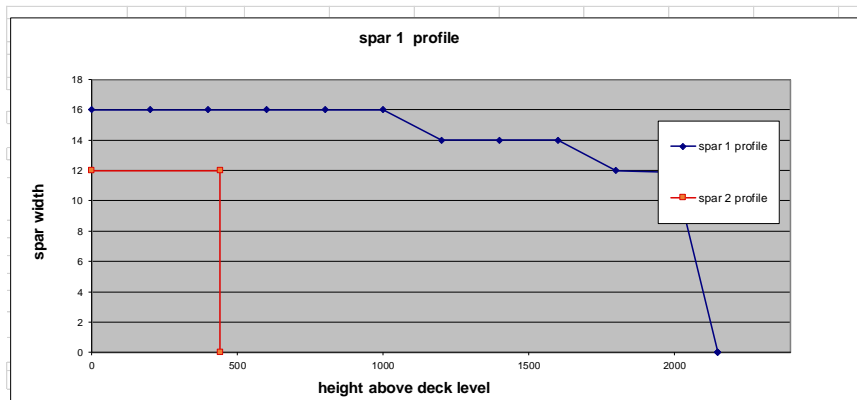



IRSA - WORLD RADIO SAILING		IRSA 10 RATER CLASS SPAR CERTIFICATION CONTROL FORM	
71	official validity check	Hull registration number	2345
delete as appropriate		delete as appropriate	
Spar1		Spar2	
m11 <input type="text" value="12"/> m10 <input type="text" value="12"/> m9 <input type="text" value="12"/> m8 <input type="text" value="14"/> m7 <input type="text" value="14"/> m6 <input type="text" value="14"/> m5 <input type="text" value="16"/> m4 <input type="text" value="16"/> m3 <input type="text" value="16"/> m2 <input type="text" value="16"/> m1 <input type="text" value="16"/> m0 <input type="text" value="16"/> m0+m1 <input type="text" value="28"/> SUM3 <input type="text" value="134"/>		E <input type="text" value="150"/> m1 <input type="text" value="12"/> mn <input type="text" value="12"/> m0 <input type="text" value="12"/> h <input type="text" value="440"/> Am <input type="text" value="5280"/> S(spar2) <input type="text" value="5280"/> At <input type="text" value="1260"/> Am <input type="text" value="29600"/> S(spar1) <input type="text" value="30860"/> S(spar2) <input type="text" value="5280"/> S(other spar) <input type="text" value=""/> S(rig area) <input type="text" value="36140"/>	
length of main structural part of mast <input type="text" value="2150"/> for information only		Warning box	
Other spar areas - show calculations here, or on another sheet :		Area of spars for alternative rigs shall not exceed this area :	
DECLARATION BY THE MEASURER			
I confirm that I have taken the measurements on this form, that they are correct and that to the best of my knowledge, the spar complies with the class rules in force at present, except as I have stated below.			
The measurer may report anything here.			
Name of Measurer (BLOCK CAPITALS)		Stamp (National Authority)	
Signature		Date	
Effective: 1st April 2018		V 18-2	
IRSA Ten Rater Class Sail 1 CCF - Certificate page 3 - not valid without pages 1, 2 and 3.			

Data entry - 6

The length of the **mast spar** is calculated from the data and is shown near the middle of the page shown here.

It is useful to make a quick check by measuring the approximate length of the mast. This ensures no data entry is missed out.

The **mast spar** length is compared with the **mainsail luff length**. If it is shorter than the **mainsail luff length** a note to that effect is shown in one of the 'warning boxes'.

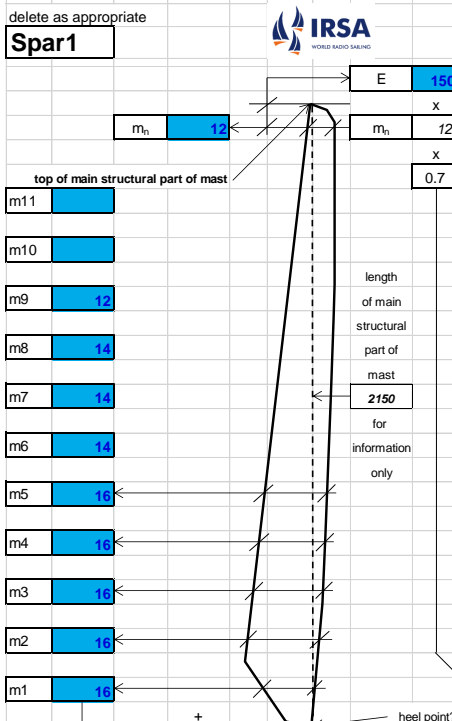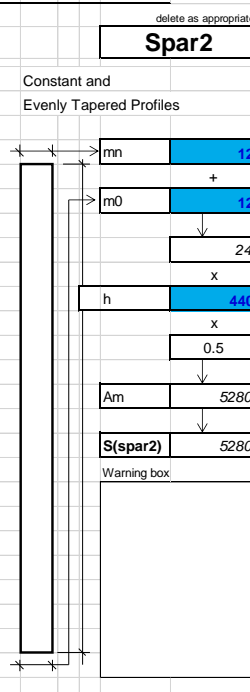IRSA - WORLD RADIO SAILING		IRSA 10 RATER CLASS SPAR CERTIFICATION CONTROL FORM	
71	official validity check	Hull registration number	2345
delete as appropriate Spar1		delete as appropriate Spar2	
			
top of main structural part of mast			
m11		mn	12
m10		m0	12
m9	12		24
m8	14	h	440
m7	14		0.5
m6	14	Am	5280
m5	16	S(spar2)	5280
m4	16	Warning box	
m3	16		
m2	16		
m1	16		
m0		At	1260
m0+m1		Am	29600
SUM3		S(spar1)	30860
		S(spar2)	5280
		S(other spar)	
		S(rig area)	36140
Other spar areas - show calculations here, or on another sheet :			
Area of spars for alternative rigs shall not exceed this area :			
DECLARATION BY THE MEASURER			
I confirm that I have taken the measurements on this form, that they are correct and that to the best of my knowledge, the spar complies with the class rules in force at present, except as I have stated below.			
The measurer may report anything here.			
Name of Measurer		Stamp (National Authority)	
(BLOCK CAPITALS)			
Signature		Date	
Effective: 1st April 2018		V 18-2	
© 2018, IRSA			

IRSA Ten Rater Class Sail 1 CCF - Certificate page 3 - not valid without pages 1, 2 and 3.

Round measurements correctly

Always round up to the next whole number

“Linear measurements shall be taken in millimetres and rounded up to the nearest whole number....”

For example, a value judged to be just over 208.0 mm, say 208.1 mm, shall be rounded to 209 before being used on the certificate.

Comparing dimensions with limits

Limits are not flexible.

*“Maximum and minimum values of limitations in the **class rules** or **certificate** shall be taken as absolute limiting values.”*

For example, a **boom** spar with a spar cross section judged to be just over 22.0 mm, say 22.1 mm, is over the 22 mm limit above which its area shall be included in the **certified rig** area.

Certification of the largest sails

Usually the largest sails and mast spar are measured first to establish the rating of the boat. After completing this...

The **official measurer** shall add following at the **tack** :

- a **certification mark** (usually his signature) as a proof of successful **certification control**
- the date of **certification control**, (usually today's date)
- the area of each **sail**,(look on the spreadsheet for the relevant sail – in square metres to 3 places of decimals e.g. 0.644)

Certification of smaller sails - 1

Other sails shall comply with the dimensions of their 'parent' sail recorded on the certificate.

Their dimensions are found in the same way as for the parent sail with one exception:



- The **sail** may be moved vertically on the grid to achieve compliance.

This is because the **tack point** (especially for headsails) will usually extend below the h_0 dimension when its **clew point** is placed on the grid line. In this case the sail is moved up the vertical grid line until the **tack point** is at the dimension recorded on the certificate (or further if necessary). Then the cross widths and heights can be taken and compared with the certificate values.

Certification of smaller sails - 2

The **sail** may be moved vertically on the grid to achieve compliance.

Note that even though the **clew point** of the smaller sail extends beyond the actual profile of the largest measured sail, its cross width and height measurements comply with those of the largest measured sail. It is compliant.

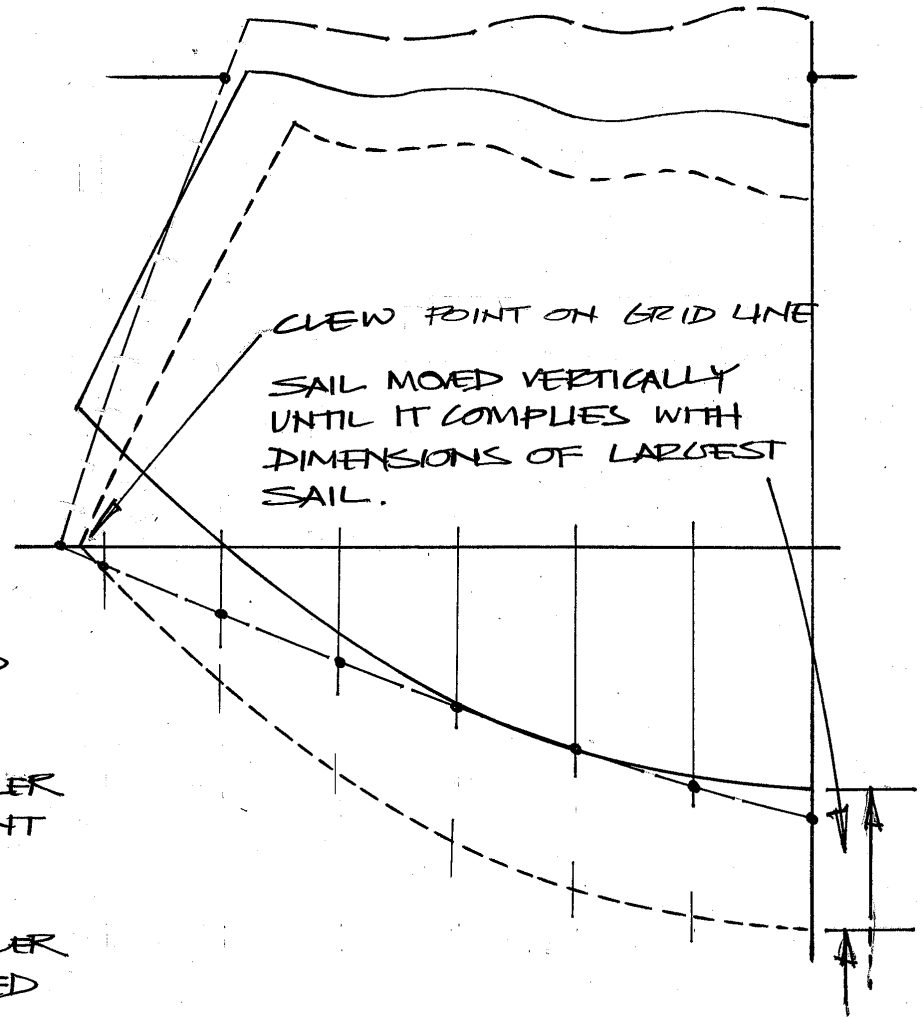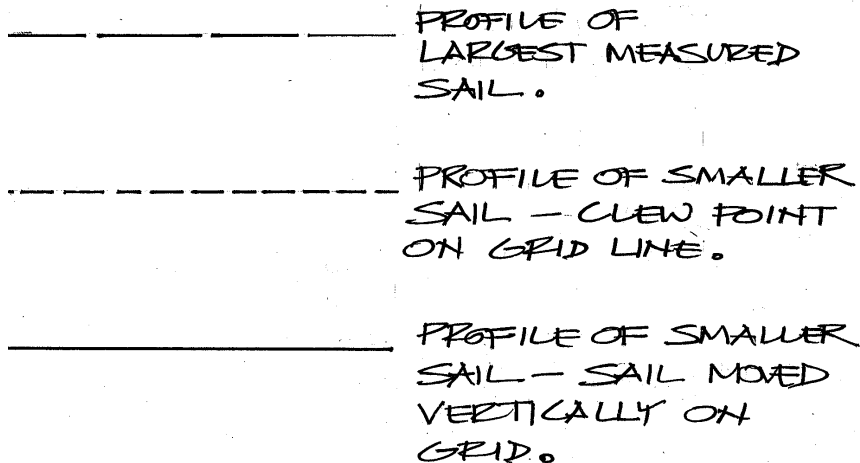

Certification of smaller sails - 3

When the smaller sails have been checked and found to comply with the dimensions of their parent sails...

The **official measurer** shall add following at the **tack**:

- a **certification mark** (usually his signature) as a proof of successful **certification control**
- the date of **certification control**, (usually today's date)
- the area of parent **mainsail** and **headsail** (look on the spreadsheet for the relevant **sail** – in square metres to 3 places of decimals e.g. 0.644) for each alternative **mainsail** and **headsail**.

Sail maker guidance - 1

This sheet is not part of the certification process but is created to log information that will be useful to the sail maker when making replacement sails to match the certificate for the boat.

Data from the data entry & rating calculation sheet appears on the sheet to identify the boat and owner.

The primary dimensions of each sail, including the ERS **quarter**, **half** and **three-quarter cross widths**, are shown.

The sail maker will also need copies of sail 1 – page 2 and sail 2 – page 3 from the certificate to ensure the sail is shaped exactly to match the certificate.

IRSA - WORLD RADIO SAILING IRSA 10 RATER CLASS SAIL MAKER GUIDANCE



Guide measurements for sail makers and Equipment Inspectors :

NB : These dimensions are approximate and for guidance only

The dimensions of **sails** shall not exceed the dimensions of the **sails** recorded on the **certificate**.

Hull Reg. No.	2345
Boat Name	Power Point
Design Name	High Voltage
Owner's Name	A. Powers
Sails Measured	01 May 2018
96	Validity check

three quarter width

0.25 LP plus 68

half width

0.5 LP plus 70

quarter width

0.75 LP plus 47

three quarter width

0.25 LP plus 39

half 0.5 LP plus 42


quarter 0.75 LP plus 33

Dimension	Sail 1	Sail 2
Luff	2062	1575
Leech	2096	1505
three-q *	177	140
half *	287	244
quarter *	373	336
LP	435	404
Foot	435	423

* Use with caution

To maximise sail area

Rating	9.994
Max permitted sail area	0.987362
Measured sail area	0.986809
Deficit - m ²	0.000553
Deficit - mm ²	553
Either	
Delta Sail 1 LP	1
Equivalent to Sail 1 LP	436
Or	
Delta Sail 2 LP	1
Equivalent to Sail 2 LP	405

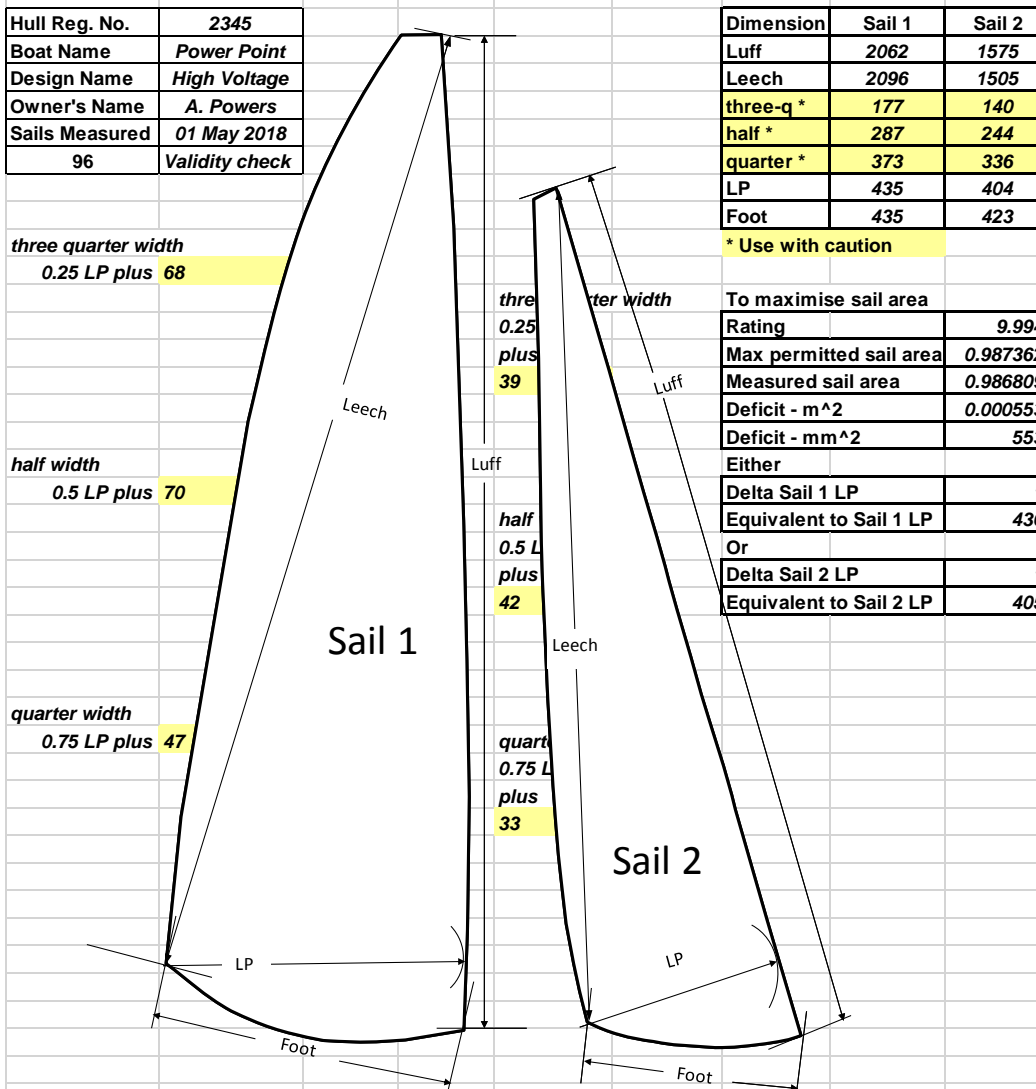

Sail maker guidance - 2

The difference between the measured area of the rig and the maximum permitted area (Deficit) is shown in units of square metres and square millimetres.

The deficit for this boat is 553 mm².

To assist the owner maximising his sail area for future measurement a 'new' dimension is found for Sail 1 LP and Sail 2 LP that will provide the additional sail area. The quarter, half and three-quarter cross widths have to be increased in correct proportion.

In this case the increase in mainsail foot length (Delta Sail 1 LP) is 1 mm. It is $553 / (0.5 \times 2062) = 0.54$ mm. This is rounded to 1.

In practice this would create a rig area that is marginally larger than permitted. Delta values greater than 1 indicate the possibility of having slightly larger sails.

IRSA - WORLD RADIO SAILING IRSA 10 RATER CLASS SAIL MAKER GUIDANCE



Guide measurements for sail makers and Equipment Inspectors :

NB : These dimensions are approximate and for guidance only

The dimensions of **sails** shall not exceed the dimensions of the **sails** recorded on the **certificate**.

Hull Reg. No.	2345
Boat Name	Power Point
Design Name	High Voltage
Owner's Name	A. Powers
Sails Measured	01 May 2018
96	Validity check

Dimension	Sail 1	Sail 2
Luff	2062	1575
Leech	2096	1505
three-q *	177	140
half *	287	244
quarter *	373	336
LP	435	404
Foot	435	423

* Use with caution

three quarter width

0.25 LP plus 68

half width

0.5 LP plus 70

quarter width

0.75 LP plus 47

three quarter width

0.25 LP plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39

plus 39


plus 39

plus 39

plus 39

To maximise sail area


Rating	9.994
Max permitted sail area	0.987362
Measured sail area	0.986809
Deficit - m ²	0.000553
Deficit - mm ²	553
Either	
Delta Sail 1 LP	1
Equivalent to Sail 1 LP	436
Or	
Delta Sail 2 LP	1
Equivalent to Sail 2 LP	405

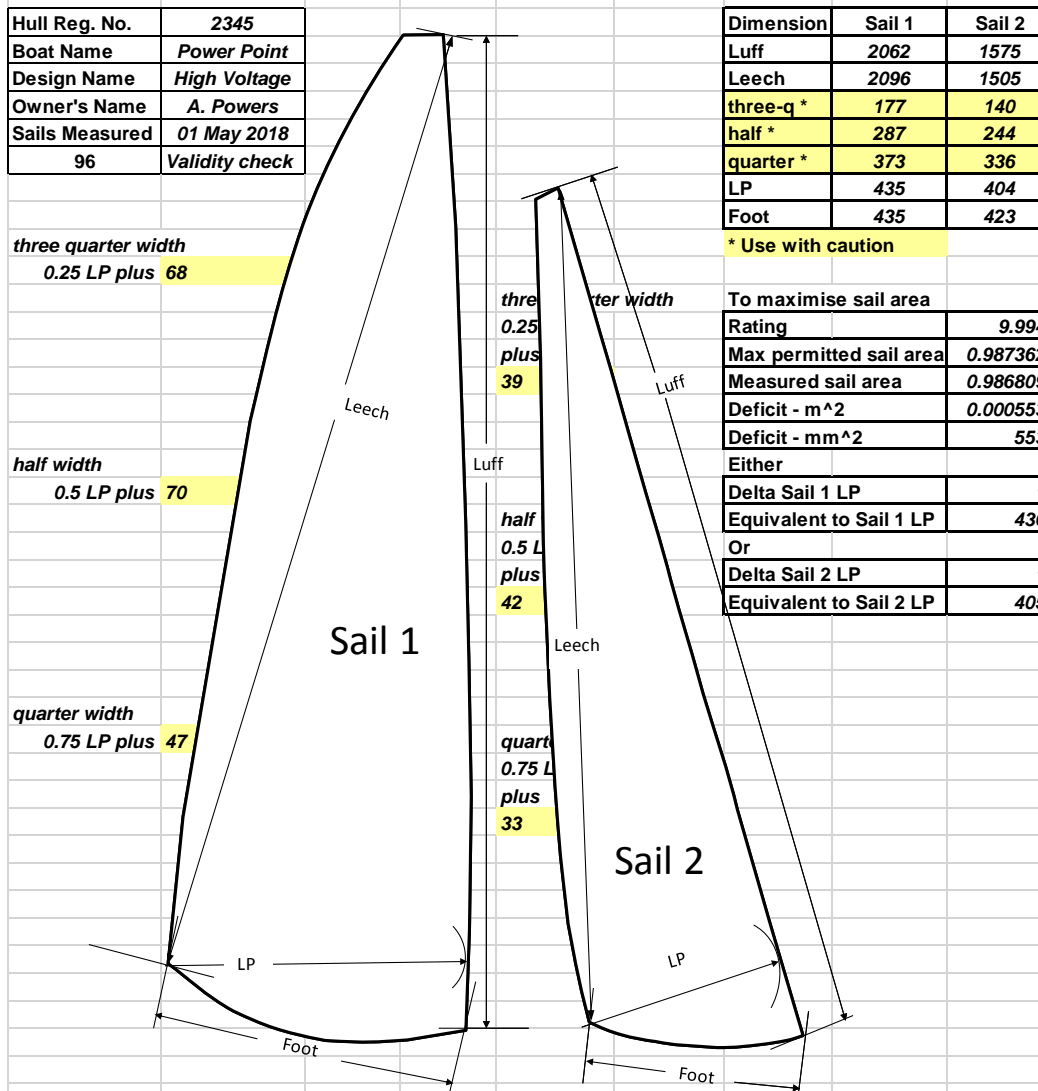

Sail maker guidance - 3

Beneath the sail diagram and associated data is a graph that shows the profile of the sail foot shapes.


The lower line (pink squares on a red line) is the headsail foot profile – two straight lines. The upper line (red squares on a red line) is the same foot profile but with reference to a straight line between **tack point** and **clew point**. It shows the foot profile is triangular with its greatest depth of 40 mm at 100 mm aft of the **tack point**.

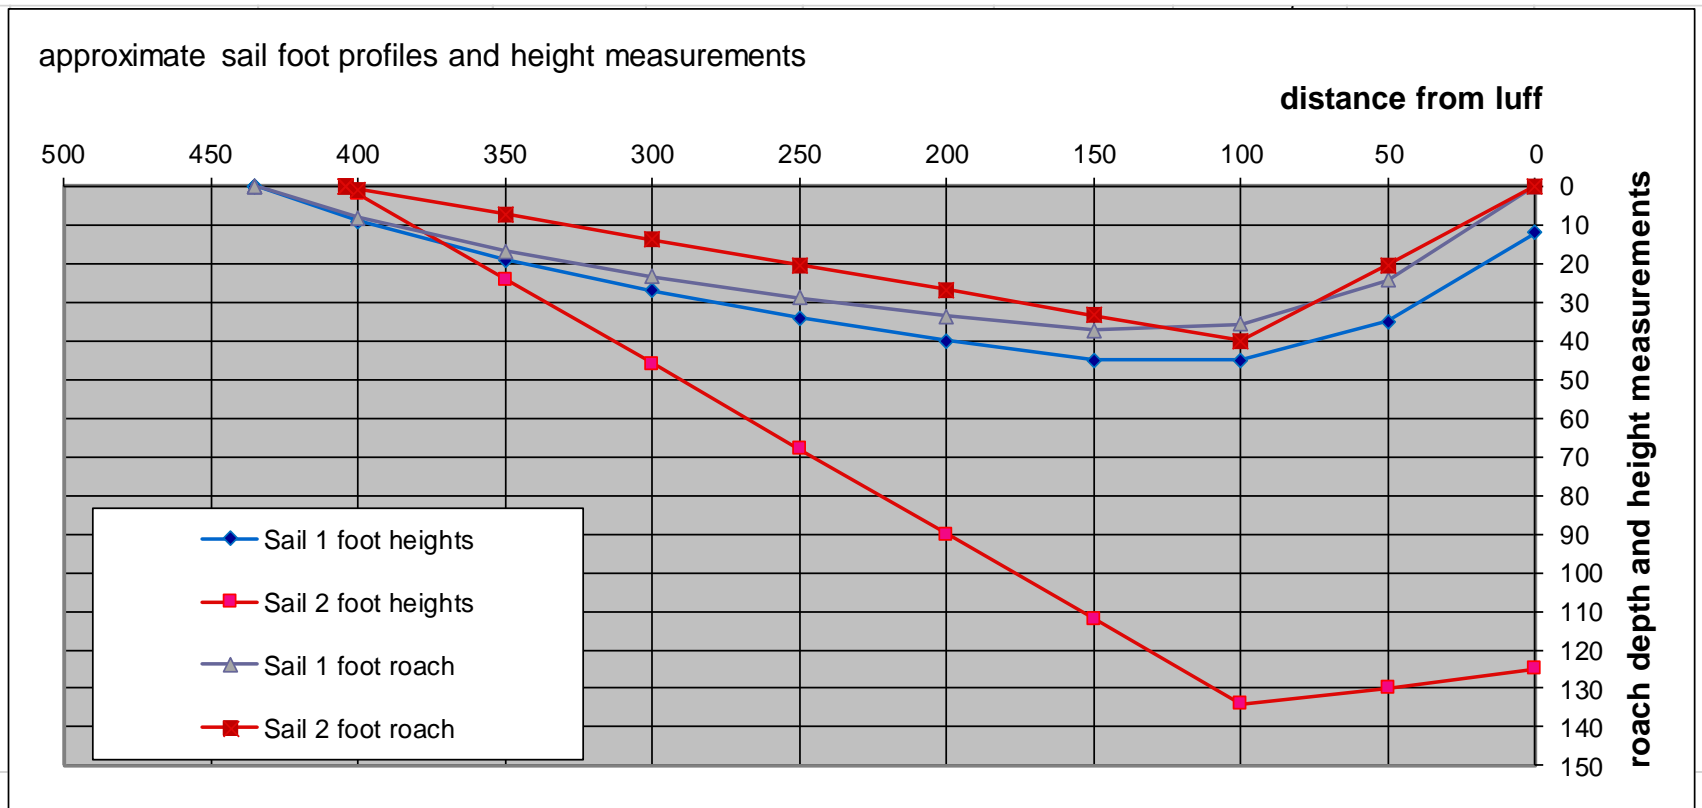

Sail maker guidance - 4

The curved line (blue diamonds on a blue line) is the mainsail foot profile. The upper curved line (violet triangles on a violet line) is the same foot profile but with reference to a straight line between **tack point** and **clew point**.

The upper line shows the foot roach is a maximum of 37 mm at 150 mm back from the tack point.

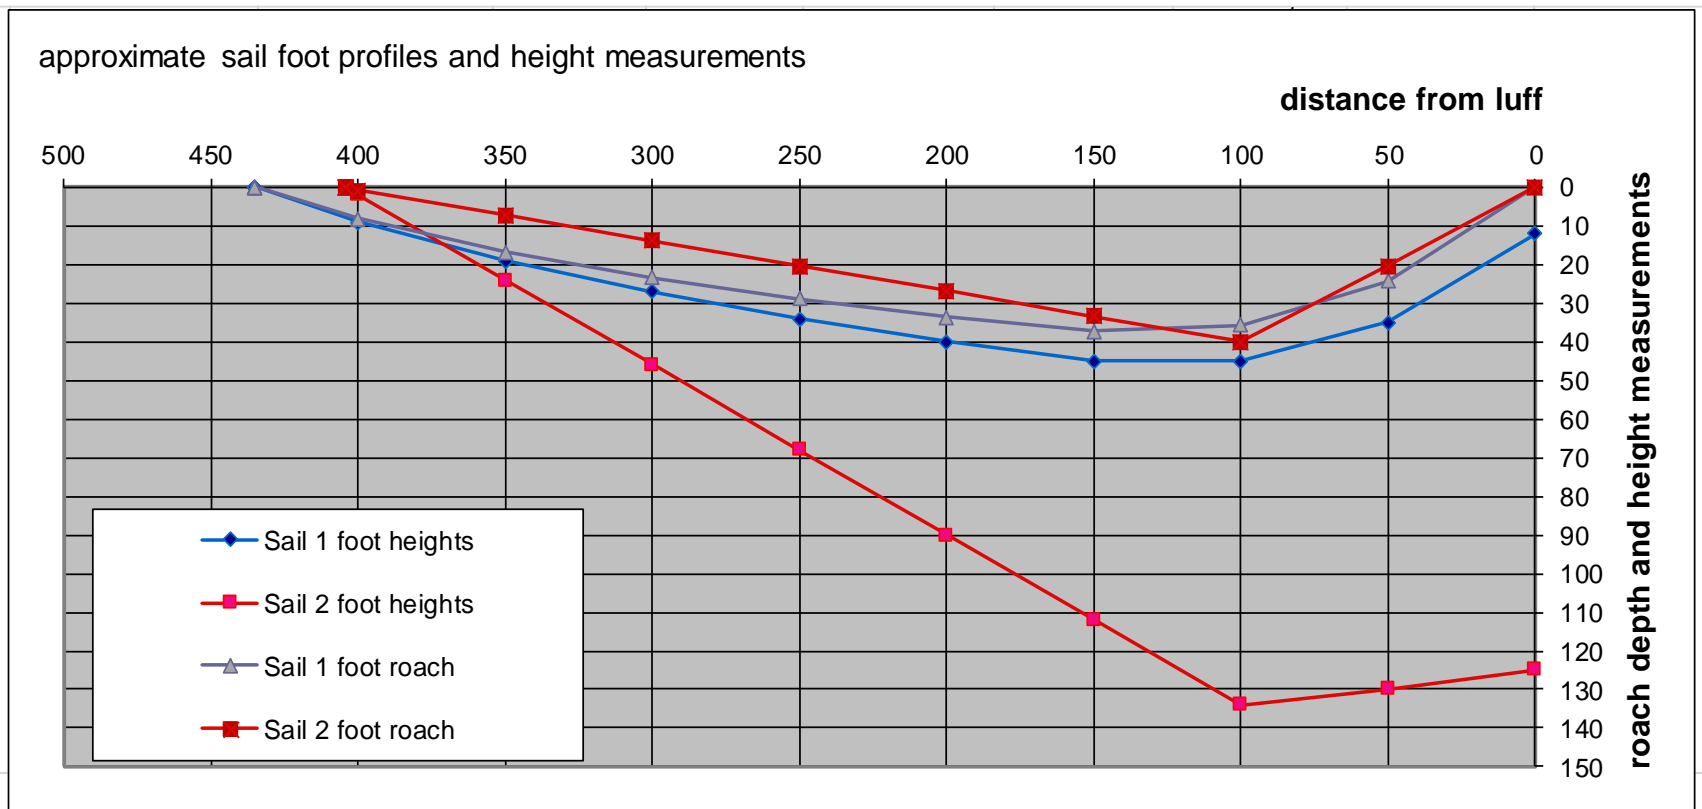

End

Valid from: November 1st 2018